
Panasonic[®]


Quick Menu Guide

(Mono bloc)
Air-to-Water Heatpump

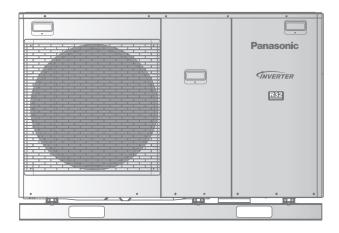

Model No.

Mono bloc Unit WH-MDC05J3E5 WH-MDC07J3E5 WH-MDC09J3E5

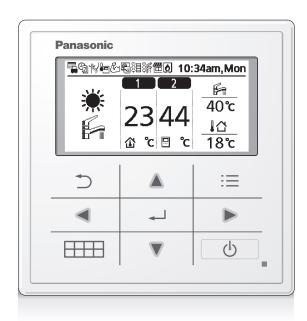



Quick Menu Guide (Mono bloc) Air-to-Water Heatpump	2-7	English
Hurtig menuvejledning (Monobloc) Luft-til-vand-varmepumpe	8-13	Dansk
Guía del menú rápido Bomba de calor de aire a agua (Mono bloc)	14-19	Español
Guida rapida dei menu Pompa di calore Aria-acqua (Mono bloc)	20-25	Italiano
Handleiding snelmenu (Mono bloc) Air-to-Water Warmtepomp	26-31	Nederlands
Przewodnik po skróconym menu (Monoblok) pompa ciepła powietrze-woda	32-37	Polski
Οδηγός Σύντομου Μενού Αντλία Θερμότητας Αέρος-Νερού (Monoblock)	38-43	Ελληνικά
Průvodce Rychlá nabídka Tepelné čerpadlo vzduch-voda (Monoblok)	44-49	Český
Guide du menu rapide Pompe à chaleur air-eau (Mono bloc)	50-55	Français
Schnellmenü-Anleitung (Kompaktgerät) Luft/Wasser-Wärmepumpe	56-61	Deutsch
Hızlı Menü Kılavuzu (Monoblok) Hava-Su Isı Pompası	62-67	Türkçe
Snabbmenyguide (Monobloc) Luft-till-Vatten-Värmepump	68-73	Svenska
Hurtigmenyveiledning (Monobloc) Luft-til-vann-varmepumpe	74-79	Norsk
Pikavalikko-opas (Monobloc) Ilmavesilämpöpumppu	80-85	Suomi
Útmutató a gyorsmenühöz (Monoblokk) Levegő-víz hőszivattyú	86-91	Magyar
Hitri vodnik meniju (Monoblok) Toplotna črpalka zrak-voda	92-97	Slovenščina
Vodič za Brzi izbornik (Monoblok) toplinska pumpa zrak-voda	98-103	Hrvatski






Before Use


This Quick Guide explains how to use the Quick Menu.

Please read the Operating Instructions thoroughly before using the Quick Menu.


How to use the Quick Menu

After the initial settings have been completed, you can select a quick menu from the following options and edit the setting.

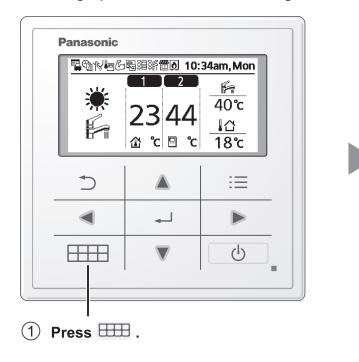

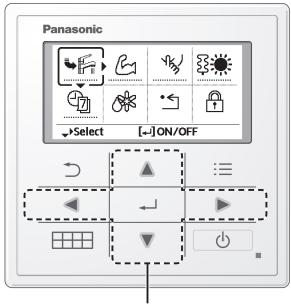

- ② Use ▲ ▼ ◀ ▶ to select menu.
- Press to turn on/off the select menu.

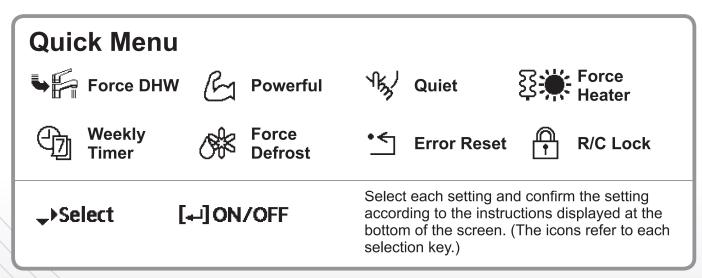

To return to the Main Screen,

Press or 5.

Notes on operation icon


Example:



• Operation icon indicate with "....." = OFF



• Operation icon indicate with "----" = ON

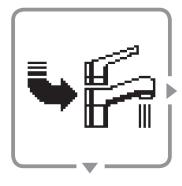

Select this icon to turn the Tank DHW on or off.

Press — to confirm your selection.



• Force DHW is turned off.

Force DHW is turned on.

Force DHW

■ Note:

- Force DHW is disabled when Force Heater is turned on.
- When Force DHW is turned off, operation & mode should change back to the previous memorized status.



Select this icon to operate the heating/cooling system powerfully.

(The powerful operation starts approximately 1 minute after \longrightarrow is pressed.)



• Powerful mode is set off.



4



• The Powerful mode operates for 30 minutes.





• The Powerful mode operates for 60 minutes.






• The Powerful mode operates for 90 minutes.

■ Note:

Powerful is disabled when operation is turned OFF.

How to use the Quick Menu

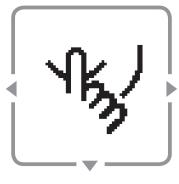


Quiet

Select this icon to operate quietly.


Press ← to confirm your selection.


(The quiet operation starts approximately 1 minute after is pressed.)

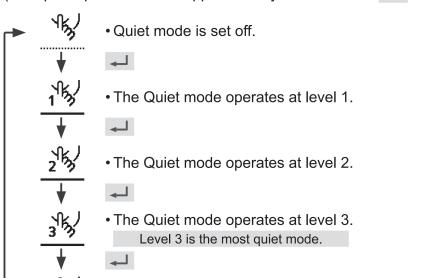

Select this to set a timer for the Quiet mode operation.



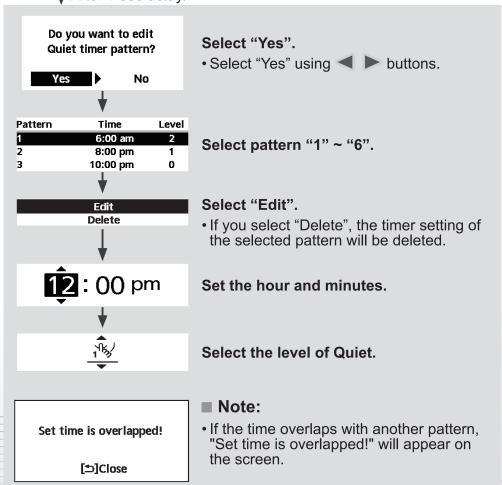

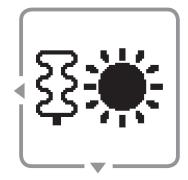


Force Heater

Select to force the Heater on.

Press — to confirm your selection.

 (The Force Heater mode starts approximately 1 minute after is pressed.)



• Force Heater is turned off.

• Force Heater is turned on.


■ Note:

 Force Heater is disabled whenever operation is already on and 'Disabled due to operation ON!' will be displayed.

Disabled due to operation ON!


[⊅]Close

How to use the Quick Menu

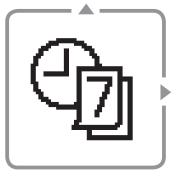

Weekly Timer Select this icon to delete (cancel) or change the pre-set Weekly Timer.


Press — to confirm your selection.

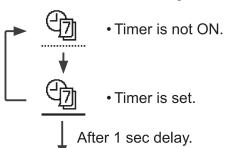

Select "Yes".

• If you select "No", the screen will return to the Main Screen.

 Timer setup: Select Timer setup to edit the Weekly Timer.



[Example of a Timer setup]
Select the day(s) which you wish to edit using ▲ ▼ buttons.

If all 6 patterns are not preset, this screen will be displayed.

Do you want to edit

Weekly timer pattern?

 
All 6 patterns are not set!
Do you want to edit?

Sun Mon Tue Wed Thu Fri Sat 1. 12:00am ON **※** 25/20°C 40°C

2:00am ON 💥 🚝 25/25°C 40°C

4:00am ON **☀** 🗐 30/20°C 40°C

- 1) Select pattern "1" ~ "6".
 - (2) Set the hour and minutes of the Timer.
 - (3) Select ON/OFF of the Timer.
 - (4) Select the operation mode.
 - **②**/**③**⊨/*/*=/*=/**=/*
 - Select mode using ▲ ▼ buttons.
 - 5 Set the temperature for both Zone 1 and 2 (if your system has the 2-Zone setting).




6 Set the Tank temperature.

■ Note:

Timer is disabled when Force Heater is turned on or Heat-Cool SW is enabled.

(6)

• If you have preset the Weekly Timer on 2 zones, you must repeat the same procedure with Zone 2.

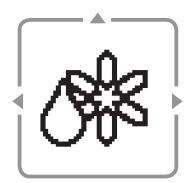

Select to defrost the frozen pipes.


Press ← to confirm your selection.

(When the mode is accepted, below screen will be displayed.)

Request accepted!

[⊅]Close

Force Defrost

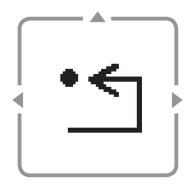

Select to restore the previous settings when error has occurred.

Press — to confirm your selection.

(When the mode has been accepted, below screen will be displayed.)

Request accepted!

[⊅]Close

 Make sure all units are turned off before selecting this mode which restores the whole system to the previous settings.

Error Reset



Select to lock the Remote Controller.

Press — to confirm your selection.

(When the mode has been accepted, below screen will be displayed.)

Select "Yes".

Do you want to lock remote control?

Yes No

(The Main Screen will be locked.)

• If "No" is selected, the screen will return to the Main Screen.

R/C Lock

To unlock the Remote Controller Press any key.

(When the mode has been accepted, below screen will be displayed.)



Enter any 4 digits of number (if the number is correct, the screen will be unlocked).

To reset forgotten password (under operation OFF screen)

Press ⊃ , → and ► continuously for 5 seconds.

(When the mode has been accepted, below screen will be displayed.)

Reset password

Select "Reset".



(The screen will be off after 3 seconds.)

1.Password is reset to 0000 2.Remote control is unlocked